

## SLIDING SLEEVE VALVE

FUNCTION: SLIDE SLEEVE IN THE DIRECTION OF THE ARROW AND IT ALLOWS AIR TO FLOW.

SLIDE SLEEVE IN THE OPPOSITE DIRECTION TO SHUT OFF AIR AND VENT SYSTEM.

1/8" NPT – SLV – 01

1/4" NPT – SLV – 02

3/8" NPT – SLV – 03

1/2" NPT – SLV - 04

