


Shuttle Valve

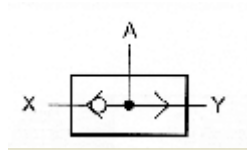

FUNCTION: CHECK MOVES FROM INLET WITH THE GREATEST PRESSURE AND BLOCKS THE PORT WITH THE LEAST.

1/8" NPT - PART NO. SV - 01

1/4" NPT - PART NO. SV - 02

